

CONVEYOR ACCESSORIES, INC.

OPERATING/SAFETY INSTRUCTIONS FOR AIR & BATTERY POWERED CUTTERS

AIR



BATTERY



Conveyor Accessories, Inc.
7013 High Grove Blvd.
Burr Ridge, IL 60527
PH: 630-655-4205 FAX: 630-655-4209

POWERED BELT CUTTER INSTRUCTIONS



Fig. 1

Fig. 1 – Make sure the blade rotation is in sync with the directional arrows for optimum cutting performance and safety. The rotation can be changed by twisting the rotation switch on the head of the ratchet.



Fig. 2

Fig. 2 – Set the blade cutting depth by loosening the knob and sliding the depth stop to the desired cutting depth. Then lock in place by tightening the knob.



Fig. 3

Fig. 3 – Connecting your power supply. Left shows connecting the air supply for the Air Powered Cutter and right shows connecting the battery pack for the Battery Powered Cutter.

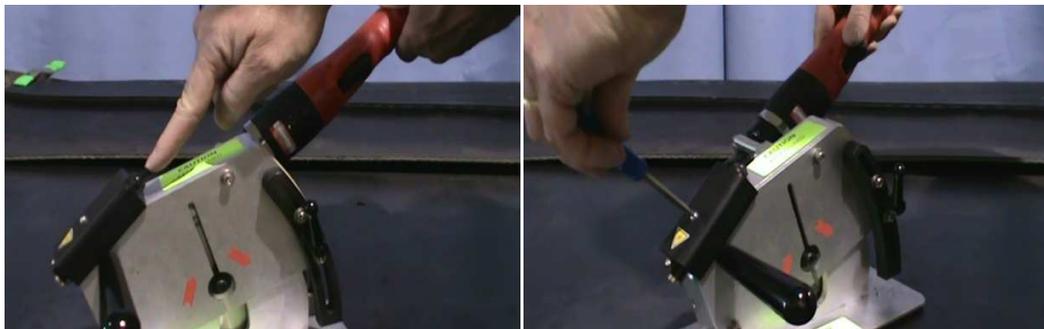


Fig. 4

Fig. 4 – To use the laser guide just use the on/off switch as indicated on the left. To replace the batteries for the laser, just remove the one screw and cover to access the two “AAA” batteries as shown on the right.

CONVEYOR ACCESSORIES, INC.

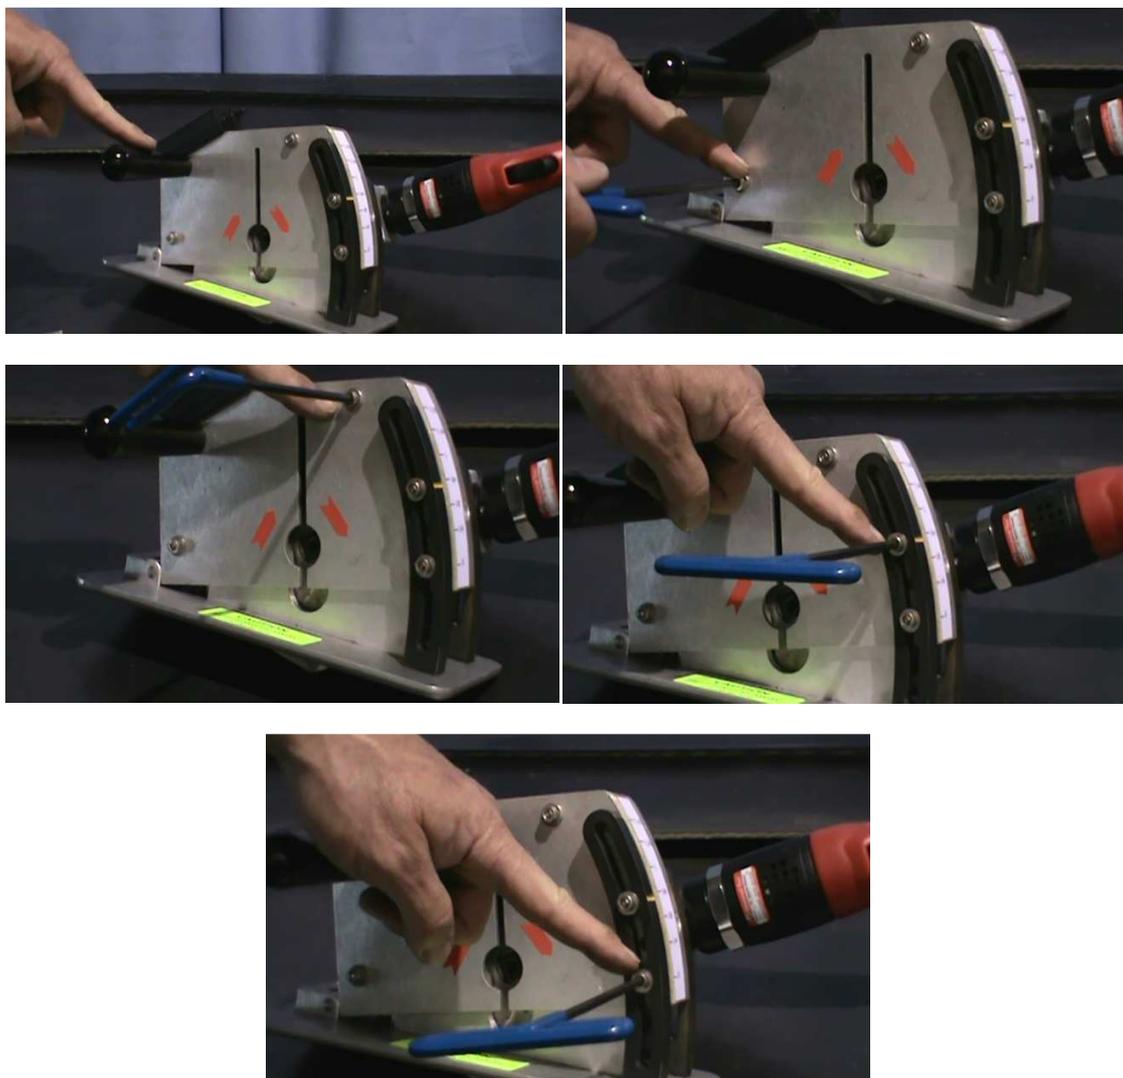


Fig. 4

Fig. 4 – To replace the blade you must first remove the side panel of the cutter by removing the handle and the four screws as shown in the pictures above.

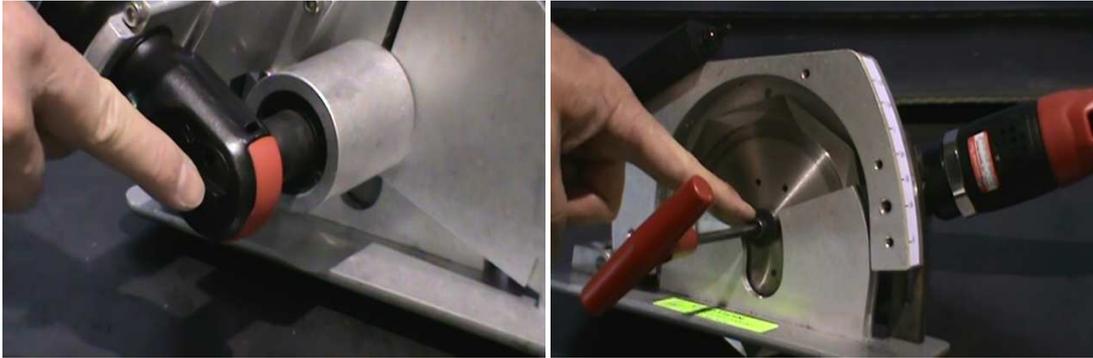


Fig. 5

Fig. 5 – To remove the center bolt holding the blade you must first change the rotation of the ratchet to make removal of the bolt possible.



Fig. 6

Fig. 6 – Once you have removed the worn blade and inserted the new blade, remember to switch the rotation of the ratchet back to its normal position to make tightening of the bolt possible.

Replace blade part number: APC-1.5 BLADE for air powered unit and BPC-1.0 BLADE for the battery powered unit.

REMEMBER THAT THESE BLADES ARE SHARP AND EXTRA PRECAUTION SHOULD BE USED WHEN HANDLING THEM!!!!

CONTACT US AT 1-800-323-7093 OR EMAIL AT cai@conveyoraccessories.com FOR ANY ADDITIONAL INFORMATION OR QUESTIONS.